



Cotton Candy Machines

Model Series:
GS1730 & GS1731

OPERATING INSTRUCTIONS

Introduction :

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance must be placed on a level surface.
3. Do not leave this appliance unattended while it is in use.
4. Never immerse the appliance in water.
5. Keep loose clothing and other foreign objects away from the spinning head.
6. Do not attempt to repair or replace the power cord if it is damaged. Contact a qualified service agent.
7. Be careful not to touch any hot surfaces. Make sure the power cord does not come into contact with any hot surfaces.

Electrical Requirements :

WARNING

ELECTRICAL SHOCK HAZARD



Plug into a grounded 3-prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

Refer to the product tag (serial plate) on the back of the unit for voltage and wattage requirements. Be sure to plug unit into grounded outlet with sufficient power.

WARNING: DURING NORMAL OPERATION, THE SPINNING HEAD OF THE UNIT IS HOT!

Preparation

1. Remove all packing pieces and lift unit out of the box.
2. Remove any outside packaging.
3. Set unit on a flat, stable, solid surface and position it away from any water source.

4. **Position the unit near a power outlet. Avoid the use of extension cords. Do not run cord under carpeting or cover with runners or the like.** Plug the unit into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the unit for voltage and wattage requirements.
5. Install the bowl on top of the base. Make sure the bowl is not in contact with the heating head. Place floss bubble shield (Optional – Sold Separately) on top of the bowl.

Operation :

1. Plug cord into grounded electrical outlet of the correct voltage.
2. Turn on the “POWER” and “HEAT” switches. Both switches will light up when turned on. Allow 2 to 3 minutes for the machine to warm up.
3. Add floss sugar directly into the well of the heated head. Do not overfill.
4. Cotton candy will begin to spin around the bowl as the heated head continues to spin. As the cotton candy begins to accumulate, it will build up and come out the top of the spinning head. The cotton candy will need to be collected as it comes out of the top of the unit.
5. Allow the machine to cool down for 15 to 20 minutes after an hour of continuous use.

Cleaning :

WARNING

BURN HAZARD



Allow equipment to cool before moving or cleaning to avoid injury or burns.


NOTE: Proper maintenance plays an important part in the life span and functioning of the machine.

1. Always unplug the machine when not in use or when cleaning.
2. Allow the components to cool off before cleaning.
3. Wipe down the spinning head with warm water and a mild detergent and a non-abrasive towel. Note: For higher volume usage, please clean the spinning head frequently to prevent build-up of burnt sugar.



4. It may be necessary after heavy use to first soak the bowl in hot water and a mild detergent.
5. Wipe down the bowl with water, a mild detergent, and a non-abrasive towel. Rinse and then dry the bowl completely.
6. Once all components are dry, re-assemble the machine.

REPAIR :

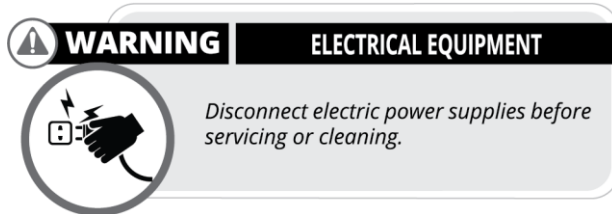

To avoid serious injury or damage, do not repair the induction cooker or replace a damaged power cord yourself. Repairs must be coordinated through: Global Solutions customer service at 1-800-782-6761.