



Soup Kettle

Model Series:
GS1650

OPERATING INSTRUCTIONS

Introduction :


1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance must be placed on a level surface.
3. Do not leave this appliance unattended while it is in use.
4. Never immerse the appliance in water.
5. Do not operate the kettle while it is empty.
6. Do not overfill the appliance with water.
7. Never move or carry the kettle when it is "ON" or if it is full of hot liquids.
8. Do not attempt to repair or replace the power cord if it is damaged. Contact a qualified service agent.
9. Be careful not to touch any hot surfaces. Make sure the power cord does not come into contact with any hot surfaces.

Electrical Requirements :

**WARNING**

ELECTRICAL SHOCK HAZARD

Plug into a grounded 3-prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

Refer to the product tag (serial plate) on the back of the unit for voltage and wattage requirements. Be sure to plug unit into grounded outlet with sufficient power.

WARNING: DURING NORMAL OPERATION, THE EXTERIOR OF THE UNIT IS HOT!

Preparation

1. Remove all packing pieces and lift unit out of the box.
2. Remove any outside packaging.
3. Set unit on a flat, stable, solid surface and position it away from any water source.
4. **Position the unit near a power outlet. Avoid the use of extension cords. Do not run cord under carpeting or cover with runners or the like** Plug heat unit into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the lamp for voltage and wattage requirements.


Operation :

1. Plug cord into grounded electrical outlet of the correct voltage.
2. Add 20 ounces of water to the kettle before placing the soup kettle insert into the warmer. Never over-fill with water. The soup kettle insert should NEVER float when empty. If it does, remove any excess water immediately.
3. Turn the warmer ON. The indicator light will glow, showing that the unit has power.
4. Set the temperature control dial to the correct setting
 - A. Settings 8-12 are designed for initial preheat.
 - B. Warming control settings range from 1-8.
5. Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food holding temperatures be used.


NOTE: The soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.

***Always keep the hinged lid attached and closed when not serving.

Cleaning :

**WARNING**

BURN HAZARD



Allow equipment to cool before moving or cleaning to avoid injury or burns.

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.

1. Always unplug the soup kettle when not in use, when filling with water or when cleaning.
2. Spilled food should be removed immediately from exterior surfaces and the top collar, with a damp, soapy cloth. DO NOT use harsh or abrasive chemicals or scouring agents.
3. Food pan insert and lid are dishwasher safe.
4. Do not immerse in water or other liquid. Do not clean with a water jet.

REPAIR :

**WARNING**

ELECTRICAL EQUIPMENT



Disconnect electric power supplies before servicing or cleaning.

To avoid serious injury or damage, do not repair the induction cooker or replace a damaged power cord yourself. Repairs must be coordinated through: Global Solutions customer service at 1-800-782-6761.