



The Vollrath Company, L.L.C.
1236 North 18th Street
P.O. Box 611
Sheboygan, WI 53082-0611
Telephone 920 457-4851

Operating and Safety Instructions

TW 27R & TSM 27

Model Numbers:

72028 - TW 27R, 1400 Watts, 120 Volts

72030 – TSM 27, 1400 Watts, 120 Volts

72031 – TSM 27, 1400 Watts, 120 Volts, With Canopy

72032 – TSM 27, 1470 Watts, 120 Volts, With Canopy and Lights



TW 27 R & TSM 27

Thank you for purchasing this Vollrath food rethermalizer/warmer. Before operating this unit, read and familiarize yourself with the following operating and safety instructions. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNING

ELECTRIC SHOCK, FIRE OR BURN INJURIES CAN OCCUR IF THIS EQUIPMENT IS NOT USED PROPERLY. TO REDUCE RISK OF INJURY:

- Plug only into grounded electrical outlets matching the nameplate rated voltage.
- Unit should only be used in a flat, level position.
- Unplug warmer and let cool before cleaning or moving.
- Do not spray controls or outside of unit with liquids or cleaning agents.
- Handle hot water carefully.
- Do not immerse
- Unplug warmer when not in use
- Do not operate unattended

IMPORTANT: Always operate this unit with water in the well

Function and Purpose:

This unit is intended to rethermalize containers of previously cooked food and hold containers of hot food at a safe serving temperature. This unit is not intended or designed to cook raw food product.

Installation:

This unit is to be used on a countertop. This unit is not designed be enclosed or built into any area.

Operation :

1. Place the food merchandiser on a flat, level surface. This unit is not designed to be enclosed or built in any area.
2. Fill each well with **1 quart of water**. Do not overfill wells. **Always maintain water in well.**

WARNING

ELECTRICAL SHOCK HAZARD

Keep water level at approx. 1 quart. If level is too high, water may overflow when the food container is inserted. The overflow could enter the electrical compartment and cause a short circuit or electric shock.