

USER MANUAL

ICE CREAM DISPLAY FREEZERS



MODEL: SD34, SD46, SD54



USR Brands, Inc.

Phone: 800-764-1172 | www.usrestaurant.com | sales@usrestaurant.com

Dear Consumers:

Thank you very much for purchasing our products. In order to ensure your safety and achieve the best out of this freezer, please read this instruction carefully.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please read this user's manual thoroughly before using.

Keep this manual handy for further reference.

Details of Product

It uses quality, effective and hermetic compressor with broad range of starting voltage, suitable ambient temperature: not higher than 38°C /100°F, reasonable matching of the freezer system guarantees its powerful refrigerant ability and energy saving.

A good choice for storage and display of your variety of frozen food product with this crystal clear glass lids display freezer.

The locking glass lids protect your frozen food during off hours.

Caution for Using

1. Unpack all packages before using the freezer. Don't bend it over more than 60° while moving it.
2. The freezer should be installed in the environment of good ventilation, Cool and dry and without corrosive gas. It should not be installed close to heat sources or directly under the sunlight. The space more than 10cm between the wall of the front and the back of the freezer should be allowed. When installing, the wheels should be padded well so as to make the freezer be level and stable, or it will cause vibration and too much noise.
3. Never store flammable, explosive or corrosive products in the freezer, and keep the freezer away from such materials.
4. If power is cut off, wait at least 5 minutes before turning on again to avoid damage to the compressor.
5. To save energy, the door should not be frequently opened for a long time.
6. The surface and the inside of the freezer should be dry and clean. Longterm moisture with cause the freezer rust slowly. (There will be some stains on the surface.)
7. Periodical cleaning is suggested for your reference. Generally, 30-45 days once is best. When cleaning, it is best to wipe the inside and the surface of the showcase with the soft cloth with neutral soap or detergent.
8. If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.